



PRECISE, PROGRAMMABLE BATCH BREWER FOR HIGHER VOLUME REQUIREMENTS.

NAME	ORDER CODE
Hands-Free Urn Tap Adapter	2100500
Jet Filter Papers - Case of 500	8000151


BREWERS

PRODUCT INFO	PERFORMANCE SPECS	SIZE		IBING & ICAL REQS		PACKAGING	
NAME ORDER CODE	FULL BREW	DIMENSIONS (D x W x H mm)	POWER @ 230V	PLUMBING REQS	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H mm)	QTY / PALLET
Jet 6 2.8kW 1000851	6L	462 202 040	2.8kW		2.41	500 400 000	<i>c</i>
Jet 6 5.6kW 1000850		462 x 303 x 840	5 (1).(3/4" BSP	24kg	500 x 400 x 900	6
Jet Twin 1000855	6L (per urn)	462 x 614 x 837	5.6kW		28kg	500 x 710 x 920	2

JKIES	PRODUCT INFO	SIZE	PACKAGING		
AULESSURIES	NAME ORDER CODE	DIMENSIONS (D x W x H mm)	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H mm)	QTY / PALLET
Ă	Jet Grinder 1000891	370 x 188 x 559	25kg	580 x 300 x 800	12
	Jet Urn 1700204	420 x 245 x 570	7kg	640 × 310 × 440	16

JET 6 BATCH BREWER

JET 6 2.8kW 1000851 JET 6 5.6kW 1000850

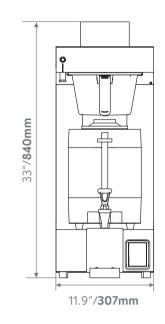

VENTILATION REQUIREMENTS

- Back: 70mm/2.7"
- Sides: 50mm/1.9"

Clearance required around machine if installed in an enclosed cabinet.


ELECTRICAL INSTALLATION PROCEDURE

1000850 - 5.6kW/200-230V ac

When installing the machine, always observe the local regulations and standards. The 5.6kW machine is supplied with a three core electrical cord and should be connected to a 30 amp dedicated socket. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

1000851 - 2.8kW/200-230V ac

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the

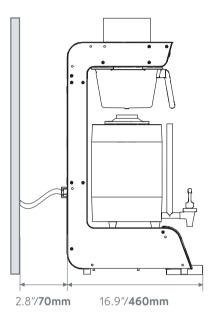

suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.
- The SP9 Head has a drip tray attached with a drain outlet which should be plumbed to waste.